



How to replace Hall Cable Sensor (Ref: 012)

1. Pull out the cable of twist grip



2. Unscrew the four screws as guide picture



3. Disconnect the connector of Hall Cable Sensor



4. Reassemble Hall Cable Sensor is reverse order